

# WILSON™ MINI RECORDER VERSION 3

Congratulations on purchasing The Wilson™ Mini Recorder, a state-of-the-art digital voice recorder. The following are instructions for its use:

## 1. Description of controls:

Hold the Wilson(TM) Mini Recorder so that the key ring is located at the upper right corner. There are five buttons located on the front surface of the Wilson(TM) Mini Recorder arranged in two rows.

- (A). The left button on the top row is the VOLume button.
- (B). The right button on the top row is the Check Message (CM) button.
- (C). The left button on the bottom row is the RECOrd button.
- (D). The middle button on the bottom row is the PLAY/STOP button.
- (E). The right button on the bottom row is the DELeTe button.

On the right edge of the Wilson(TM) Mini Recorder is the charging cable connector. Below the charging cable connector is the ON/OFF switch. Slide the ON/OFF switch up for ON and slide the ON/OFF switch down for OFF.

The Wilson™ Mini Recorder does not consume battery power while it is idle, however, you may wish to switch off the Wilson™ Mini Recorder to prevent accidental recording or playback.

## 2. Charging the battery:

The Wilson(TM) Mini Recorder comes with a built-in rechargeable Lithium-ion battery. Before using the Wilson(TM) Mini Recorder, you must fully charge the battery for at least eight hours.

*There are several ways to charge the battery:*

- (A). Connect your Wilson™ Mini Recorder to your computer using the charging cable (included). Connect the smaller end of the charging cable to the Wilson(TM) Mini Recorder and the larger end of the charging cable into a USB port on your computer.
- (B). Connect your Wilson™ Mini Recorder to the charger for your mobile phone. Disconnect the cable from your mobile phone charger, then connect the charging cable for the Wilson(TM) Mini Recorder to your mobile phone charger.
- (C). Connect your Wilson™ Mini Recorder to an AC outlet in your home using the charging cable (included). You will need a charging cube converter.

The red LED indicator stays ON continuously while charging is in progress. Once the battery is fully charged, the red LED indicator will switch Off. You may charge the battery while the Wilson™ Mini Recorder is switched Off or while it is in use. Recharge the battery when the voice quality is reduced during message playback. Recharge the battery for at least eight hours once every six months.

## 3. Recording:

Set the power On/Off switch to the On position. To record, press the RECOrd button. After you hear a beep, speak in the direction of The Wilson™ Mini Recorder. A red LED lindicator will flash, indicating that the device is recording. To stop recording, press the Play/Stop button. The Wilson(TM) Mini Recorder will beep twice, indicating that the recording has stopped.

If the memory is full, The Wilson™ Mini Recorder will automatically delete the oldest message. You can record messages up to a combined total length of two (2) hours.

## 4. Play Back:

To play back your messages, press the Play/Stop button. To stop playback, press the Play/Stop button while playing a message. Once a message has been played back in its entirety, The Wilson™ Mini Recorder will beep once and the red LED indicator will flash once.

If more than one message has been recorded, The Wilson™ Mini Recorder will play back the most recently recorded message first. Each time the Play/Stop button is pressed thereafter, The Wilson™ Mini Recorder will play all recorded messages in reverse chronological order (newest to oldest).

## 5. To Pause the playback:

While a message is being played, press the PLAY/STOP button. The playback has been paused. To resume playback press the PLAY/STOP button again. The playback has been resumed.

## 6. Deleting Messages:

To delete a message, press the DELeTe button twice in quick succession while playing the message you wish to delete. The Wilson™ Mini Recorder will beep twice to indicate the message is being deleted.

## 7. Delete all messages:

To delete all messages, press and hold both the RECOrd and DELeTe buttons together for 5 seconds and all messages will be deleted. The Wilson™ Mini Recorder will beep once to indicate that all messages have been deleted.

## 8. Volume Control:

When you turn On the Wilson™ Mini Recorder, the volume is set to the mid level. Press the VOLume button to set the level. Continue to press the VOLume button until the desired volume is set.

## 9. Memory full indication:

When the memory is full, the Wilson™ Mini Recorder will automatically delete the oldest message when the next message is recorded.

## 10. Check message button (CM):

Press the Check Message (CM) button and it will announce how many messages are stored on the Wilson™ Mini Recorder.

Press & hold the Check Message (CM) button to hear the message count "one, two, three", etc. Release the Check Message (CM) button when you have reached the message you want to playback.

## 11. Reverse Order of Messages:

Press and hold the PLAY/STOP button, it will reverse your messages.

## DISCLAIMER

No liability is assumed, directly or indirectly, for any damage or loss resulting from the use of The Wilson™ Mini Recorder. The manufacturer assumes no responsibility for data loss, improper use, damage, repairs, defects, battery use or replacement, or any other costs.

Repair or replacement, as provided under this Limited Warranty, shall be the exclusive remedy of the consumer. Talk To The Wilson LLC shall not be liable for incidental or consequential damages resulting from the use of The Wilson™ Mini Recorder or arising out of any breach of any express or implied warranty with respect to The Wilson™ Mini Recorder.

## LIMITED WARRANTY

Talk To The Wilson LLC grants a limited warranty for The Wilson™ Mini Recorder for 1 year from the date of purchase. Please retain the sales receipt, as proof of purchase is required. During the warranty period, The Wilson™ Mini Recorder is eligible for repair or replacement because of defects in materials or workmanship.

In such cases, the Wilson™ Mini Recorder will be repaired or replaced as determined by Talk To The Wilson, LLC, in its sole discretion. Notwithstanding the preceding, this limited warranty does not cover damages caused by accident, improper use or unauthorized modifications. In addition, this limited warranty does not cover expendable materials and defects which constitute normal wear and tear. Please contact Talk To The Wilson LLC, via our website: [www.talktothewilson.com](http://www.talktothewilson.com) for limited warranty questions or service. The sales receipt must be included with the return of the recorder.

Please note: Retailer is not responsible for warranty claims.

Talk To The Wilson, LLC.  
10105 E.Via Linda #103-196  
Scottsdale, AZ 85258-5356

Phone: 1-866-551-1588  
Email: [talktothewilson@gmail.com](mailto:talktothewilson@gmail.com)  
Sales Email: [sales@talktothewilson.com](mailto:sales@talktothewilson.com)

Product of China