

WILSON™ MINI RECORDER VERSION 4

Congratulations on purchasing The Wilson™ Mini Recorder, a state-of-the-art digital voice recorder. The following are instructions for its use:

1. Description of controls:

Hold the Wilson(TM) Mini Recorder so that the key ring is located at the upper right corner. There are five buttons located on the front surface of the Wilson(TM) Mini Recorder arranged in two rows.

- (A). The left button on the top row is the VOLUME button.
- (B). The right button on the top row is the Check Message (CM) button.
- (C). The left button on the bottom row is the RECORD button.
- (D). The middle button on the bottom row is the PLAY/STOP button.
- (E). The right button on the bottom row is the DELETE button.

On the right edge of the Wilson(TM) Mini Recorder is the charging cable connector. Below the charging cable connector is the ON/OFF switch. Slide the ON/OFF switch up for ON and slide the ON/OFF switch down for OFF.

The Wilson™ Mini Recorder does not consume battery power while it is idle, however, you may wish to switch off the Wilson™ Mini Recorder to prevent accidental recording or playback.

Recording:

To record, press the Record button (REC). After a beep, speak in the direction of **The Wilson™**. A LED light will flash indicating that **The Wilson™** is recording.

To stop recording, press the Play/Stop button **The Wilson™** will beep twice, indicating that the recording has stopped.

Alternatively, **The Wilson™** will automatically delete the oldest message if the memory is full.

TO PAUSE THE RECORDING: Simply press the record (REC) button again, the LED light will stop blinking indicating that the recording has been paused. To resume recording press the button again, the LED will begin flashing again indicating that the recording has resumed.

You can record messages of total length / recording time of up to 6 hours.

Check messages (CM Key)

Press the CM key, located on the side of the unit and it will announce how many messages are stored on **The Wilson™ Play Back**. To play back your message, simply press the Play/Stop button.

To stop playing message, press the Play/Stop button while playing. Once a message has been played in its entirety, **The Wilson™** will beep once and the LED light will blink once.

If more than one message has been recorded, **The Wilson™** will playback the most recently recorded message first.

Each time the Play/Stop button is pressed thereafter, **The Wilson™** will play all recorded messages oldest to newest.

To Pause the Play Back: Simply press the Play/Stop button again, the LED light will stop blinking indicating that the message has been paused.

To resume play back press the button again, the LED will begin flashing again indicating that the message has been resumed.

Play Selected Messages:

Press & hold the CM button to hear message count forwards "one, two, three...etc." then release the CM button when you have reached the number of the message you want to play back.

Play Backwards Selected Messages:

Press & hold the VOL button to hear message count backwards "four, three, two.... etc." release the VOL button when you have reached the message you want to play back.

Deleting Messages:

To delete a message, press the Delete button(DEL) twice in quick succession while playing the message you wish to delete. **The Wilson™** will beep twice to indicate the message is deleted.


Delete All Messages:

To delete all messages, press and hold the Delete (DEL) button until a voice asks you: "Delete All", press the delete (DEL) button again to confirm you are deleting all messages. **The Wilson™** will then delete all the messages.

Volume Control: (Digital Volume Control)

When you install the batteries (not included) the volume is then set to mid-level, push the VOL button until desired volume is set.

Important Note: If the recorder is not working for 5 minutes, switch the power OFF, then switch the power ON again to activate.

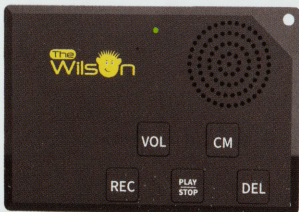

DISCLAIMER

No liability is assumed, directly or indirectly, for any damage or loss resulting from the use of The Wilson™ Mini Recorder. The manufacturer assumes no responsibility for data loss, improper use, damage, repairs, defects, battery use or replacement, or any other costs.

Repair or replacement, as provided under this Limited Warranty, shall be the exclusive remedy of the consumer. Talk To The Wilson LLC shall not be liable for incidental or consequential damages resulting from the use of The Wilson™ Mini Recorder or arising out of any breach of any express or implied warranty with respect to The Wilson™ Mini Recorder.

LIMITED WARRANTY

Talk To The Wilson LLC grants a limited warranty for The Wilson™ Mini Recorder for 1 year from the date of purchase. Please retain the sales receipt, as proof of purchase is required. During the warranty period, The Wilson™ Mini Recorder is eligible for repair or replacement because of defects in materials or workmanship.

In such cases, the Wilson™ Mini Recorder will be repaired or replaced as determined by Talk To The Wilson, LLC, in its sole discretion. Notwithstanding the preceding, this limited warranty does not cover damages caused by accident, improper use or unauthorized modifications. In addition, this limited warranty does not cover expendable materials and defects which constitute normal wear and tear. Please contact Talk To The Wilson LLC, via our website: www.talktothewilson.com for limited warranty questions or service. The sales receipt must be included with the return of the recorder.

Please note: Retailer is not responsible for warranty claims.

Talk To The Wilson, LLC.
10105 E.Via Linda #103-196
Scottsdale, AZ 85258-5356

Phone: 1-866-551-1588
Email: talktothewilson@gmail.com
Sales Email: sales@talktothewilson.com