

## DISCLAIMER

No liability is assumed, directly or indirectly, for any damage or loss resulting from the use of **The Wilson™**. The manufacturer assumes no responsibility for data loss, improper use, damage, repairs, defects, battery use or replacement, or any other costs. Repair or replacement, as provided under the Limited Warranty, shall be the exclusive remedy of the consumer.

Talk to the Wilson shall not be liable for incidental or consequential damages resulting from the use of **The Wilson™** or arising out of any breach of any express or implied warranty with respect to **The Wilson™**.

## LIMITED WARRANTY

Talk to the Wilson grants a limited warranty for **The Wilson™** for 1 year from the date of purchase. Please retain the sales receipt, as proof of purchase is required. During the warranty period, **The Wilson™** is eligible for repair or replacement in the event of defects in materials or workmanship. In such cases, the defective product will be repaired or replaced as determined by Talk To The Wilson in its sole discretion. Notwithstanding the preceding, this limited warranty does not cover damage caused by accident, improper use or unauthorized modifications. In addition, this limited warranty does not cover expendable materials and defects which constitute normal wear and tear. Please contact Talk to the Wilson, via our website for limited warranty questions or service.

Please note: Retailer is not responsible for warranty claims.

Talk To the Wilson, LLC.  
10105 E. Via Linda #103-196  
Scottsdale, AZ 85258  
USA

[www.talktothewilson.com](http://www.talktothewilson.com)

Made in China



## INSTRUCTIONS FOR USING **THE WILSON™** Recorder V12

*Congratulations on purchasing  
**The Wilson™**, a state-of-the-art digital  
voice recorder.*

**The following are instructions for its use:**

**Dual type battery: Li-ion Rechargeable battery** **The Wilson™** V12 comes with a built-in Li-ion rechargeable battery.

**Before using the device, you must fully charge the battery.**

**Charging *The Wilson™* recorder V12:** Connect the USB cable (included) the type C plug end into the **The Wilson™** recorder (the port is located on the top) and the other end into your computer or the USB adapter.



The red LED stays ON continuously to indicate that the charging is in progress. Once the battery is fully charged, the LED will switch to Off. You can charge the battery when the unit is off or in use.

**Optional Alkaline battery:** If you want to use Alkaline battery it requires two (2) AAA batteries (not included). To insert batteries, open the battery cover from the back of **The Wilson™** and remove the rechargeable battery then insert the alkaline batteries with negative (-) end against the springs. Replace the battery cover.

**NOTE: The rechargeable battery will be extremely difficult to reinstall once removed. If rechargeable cable is damaged while removing or reinstalling it will not be covered under warranty**

Once the batteries have been inserted and turn ON the power slide switch, **The Wilson™** will beep twice and LED blinking once to indicate it is operational.

Note: When batteries are removed and replaced, **The Wilson™** will retain all existing messages.

**When using Alkaline batteries, they must be a high-quality battery for this recorder.**

## INSTRUCTIONS FOR USING *The Wilson™* Recorder V12

### Recording:

Set the Power On-Off selection switch to ON position. To record, press the Record button (REC). After a beep, speak in the direction of *The Wilson™*. An LED light will flash, indicating that the device is recording.

To stop recording, press the Play/Stop button. *The Wilson™* will beep twice, indicating that the recording has stopped.

### You can record 12 hours of messages.

*The Wilson™* will automatically delete the oldest message if the memory is full.

### Play Back:

To play back your message, simply press the Play/Stop button. To stop play back, press the Play/Stop button while playing. Once a message has been played back in its entirety, *The Wilson™* will beep once, and the LED light will flash once.

If more than one message has been recorded, *The Wilson™* will play back the most recently recorded message first. Each time the Play/Stop button is pressed thereafter, *The Wilson™* will play all recorded messages in reverse order (newest to oldest).

### To Pause the Playback:

Simply press the Play/Stop button again the LED light will stop blinking indicating that the playback has been paused. To resume playback press the same button again the LED will begin flashing again indicating that the playback has been resumed.

### Deleting Messages:

To delete a message, press the Delete button (DEL) twice in quick succession while playing the message you wish to delete. *The Wilson™* will beep twice to indicate the message is being deleted.

### Delete all Messages:

To delete all messages, press the delete (DEL) button and hold for 5 seconds, there is a voice to asking <Delete All>, press delete button again to confirm delete all messages. *The Wilson™* will be deleted and will be 3 beeps to indicate all messages are deleted.

### Volume Control:

When you turn On the device, the volume is set to the mid-level, push the Vol button to change the level, continue to press the button until desired volume is set.

### Memory Full:

The device will automatically delete the oldest message.

### Check message button (CM):

Press the CM button located on the side of the *The Wilson™* and it will announce how many messages are stored on the device.

### Play the Selected Message:

Press & hold the CM button to hear message count "one, two, three, etc...." release the CM button when you have reached the message you want to playback.

### Reverse Order of Messages:

Just press and hold the < VOL > button, it will count from oldest to new messages until which message you want to play, then release the < VOL > button, the selected message will play automatically.

